


Zone 1: Thermostats located in Rooms 219 & 318


Zone 2: Thermostats located in Rooms 112 & 214

Zone 3: Thermostats located in Room 409 & 4th Floor Lounge


Zone 4:

Zone 5:

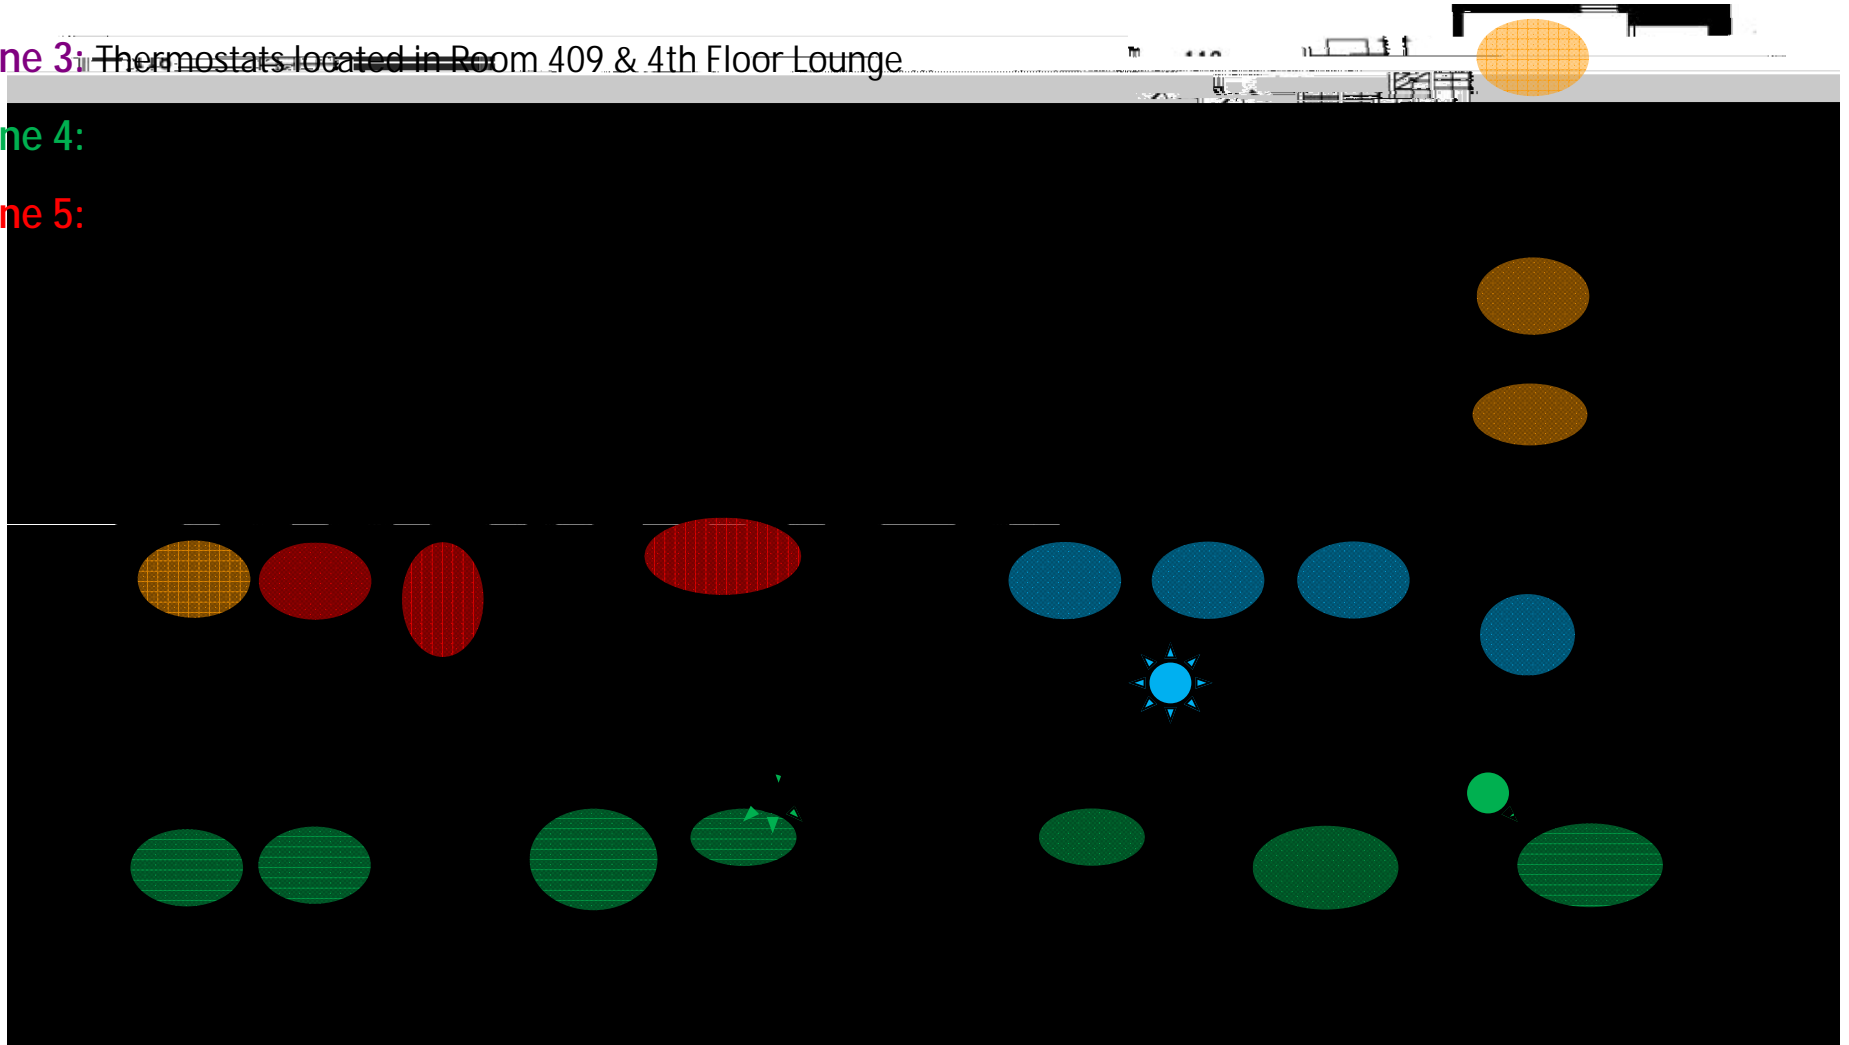

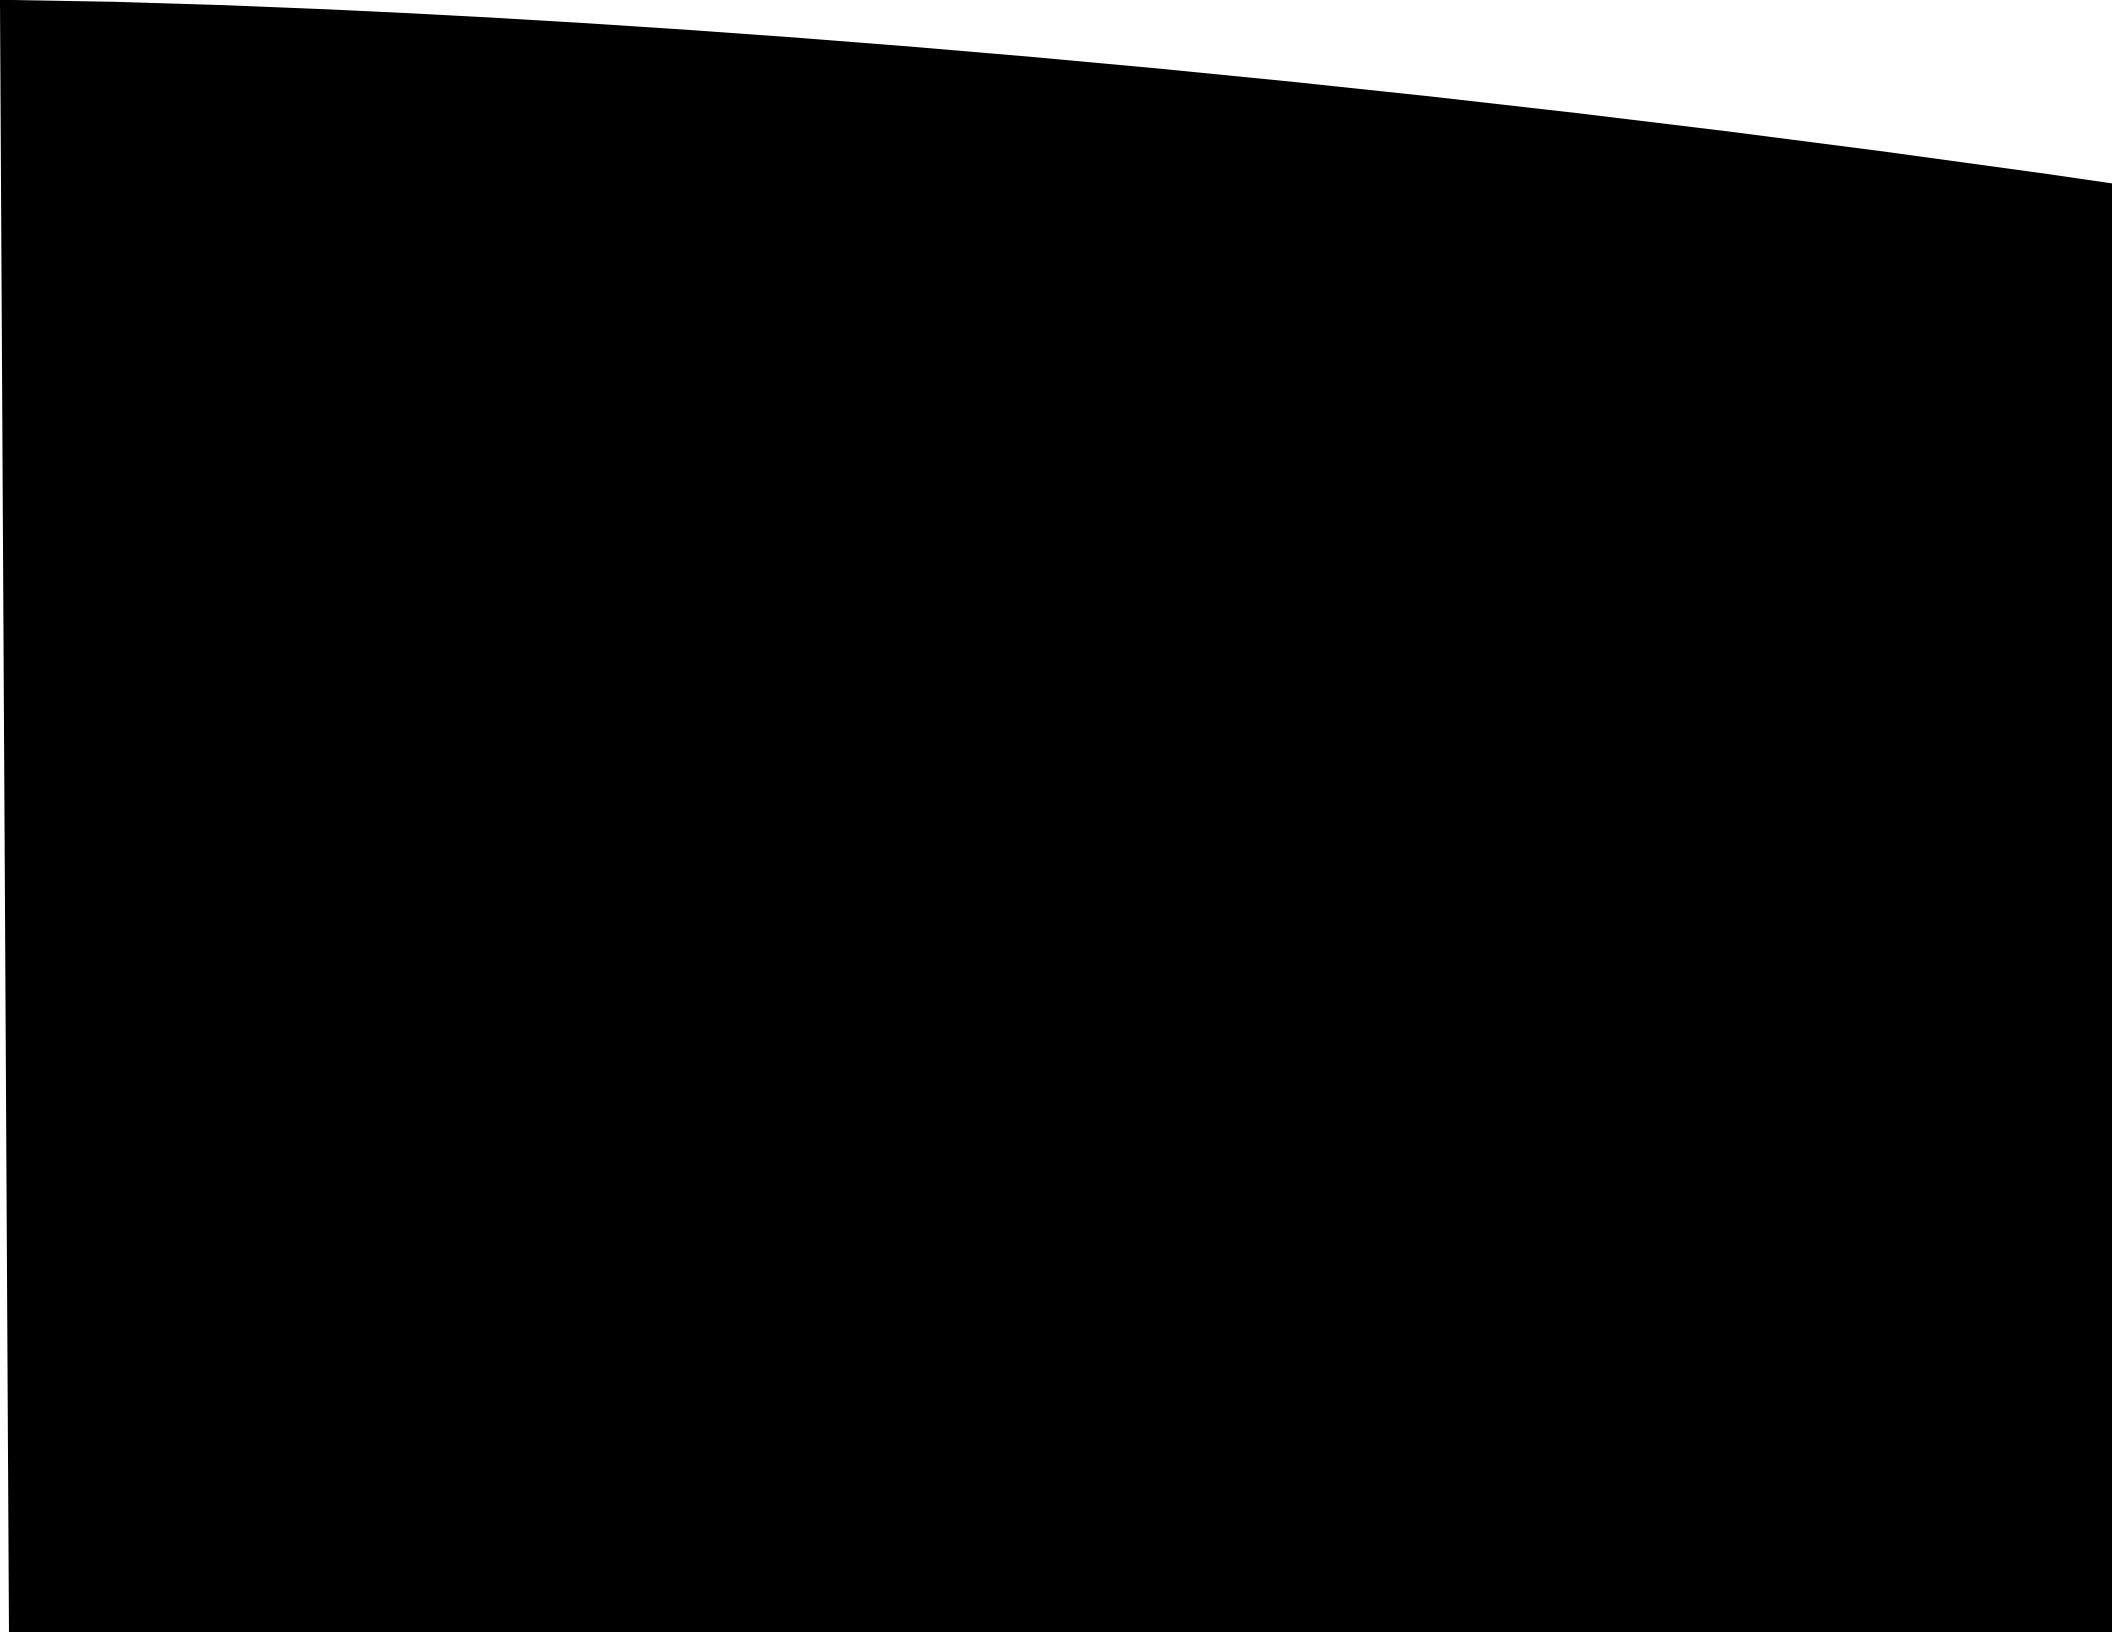

Zone 1: Thermostats

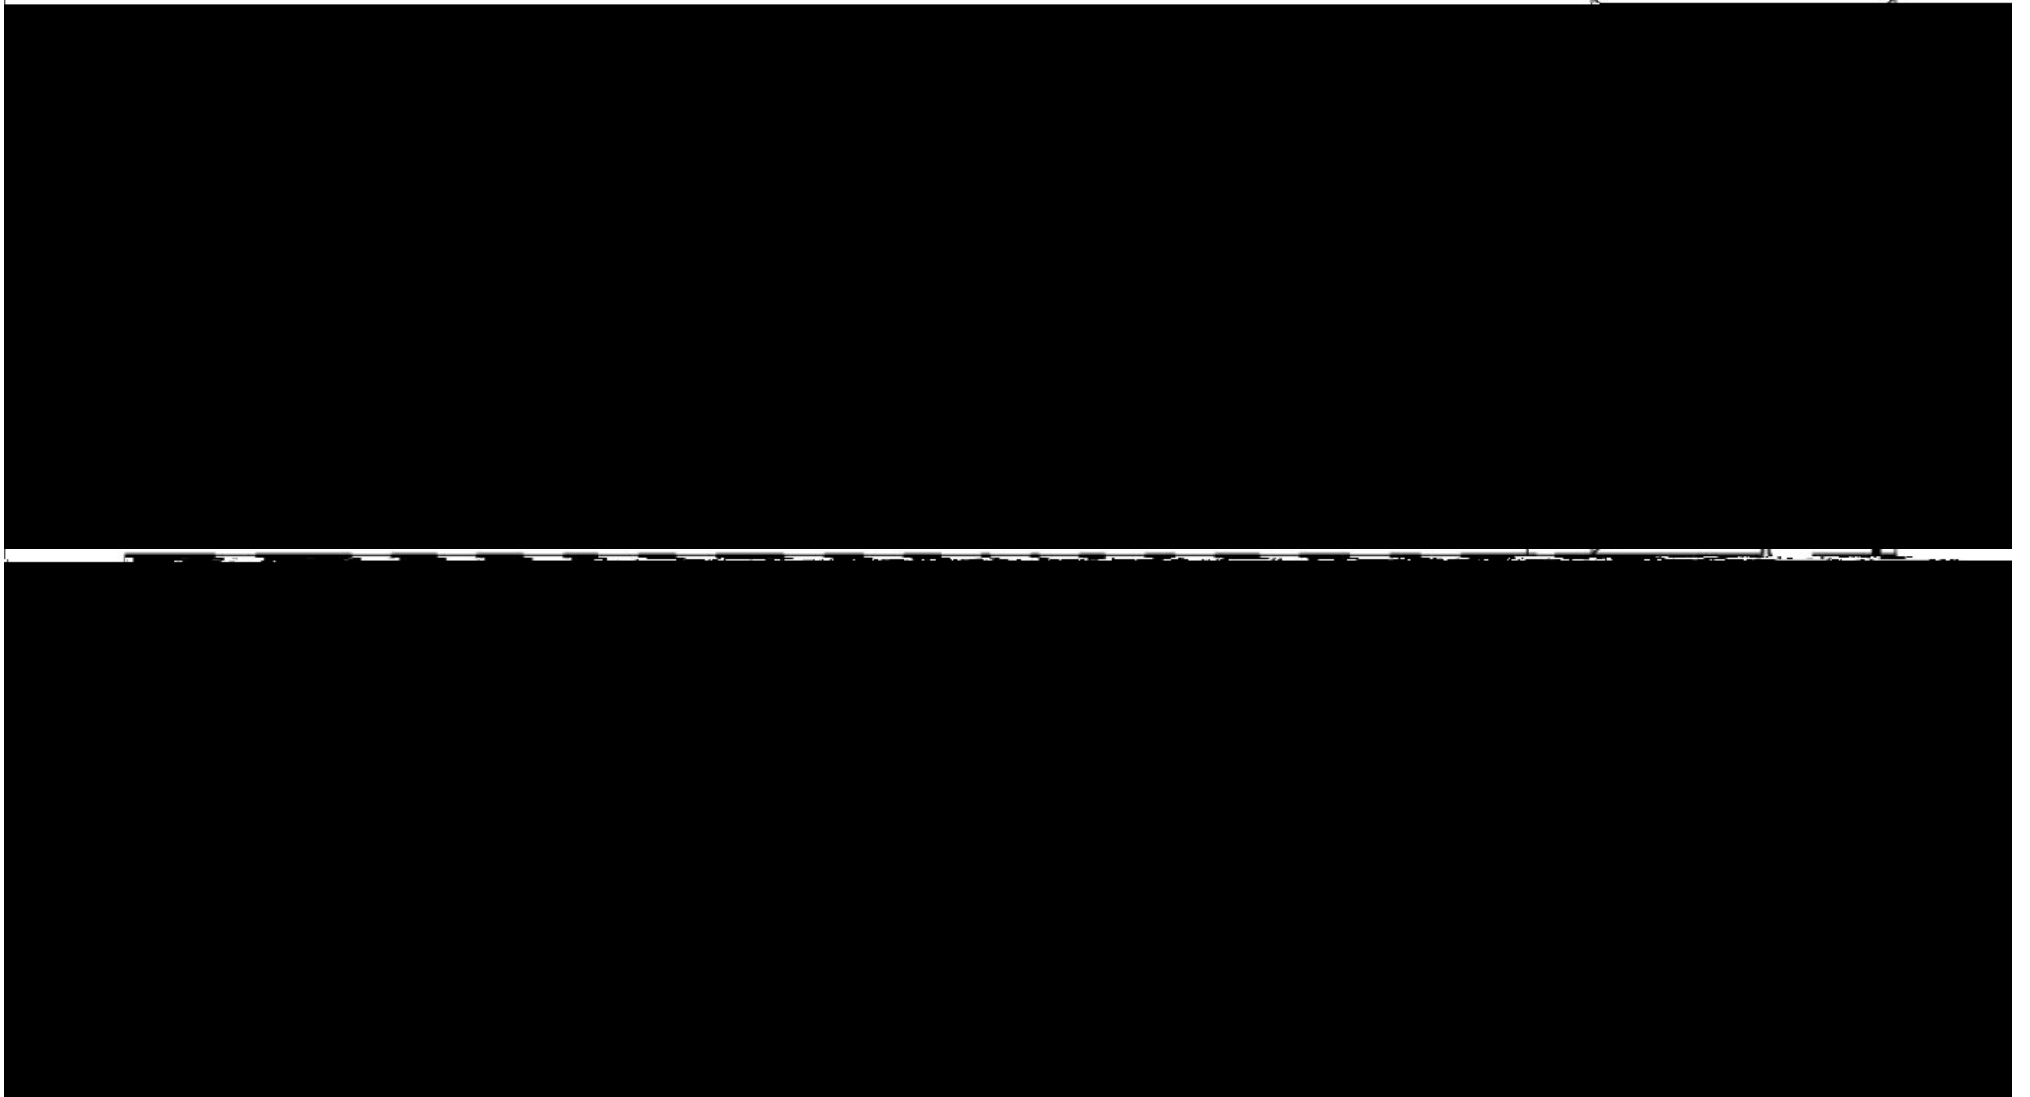

Zone 1: Thermostats located in Rooms 219 & 318

Zone 2: Thermostats located in Rooms 112 & 214

Zone 3: Thermostats located in Room 409 & 4th Floor Lounge

Zone 4: Thermostats located in Rooms 107 & 1st Floor Dining Room

Zone 5: Thermostats located in Rooms 204 & 304

